



PEARSON YACHTS-ALL BOATS  
MAST BOOT INSTALLATION

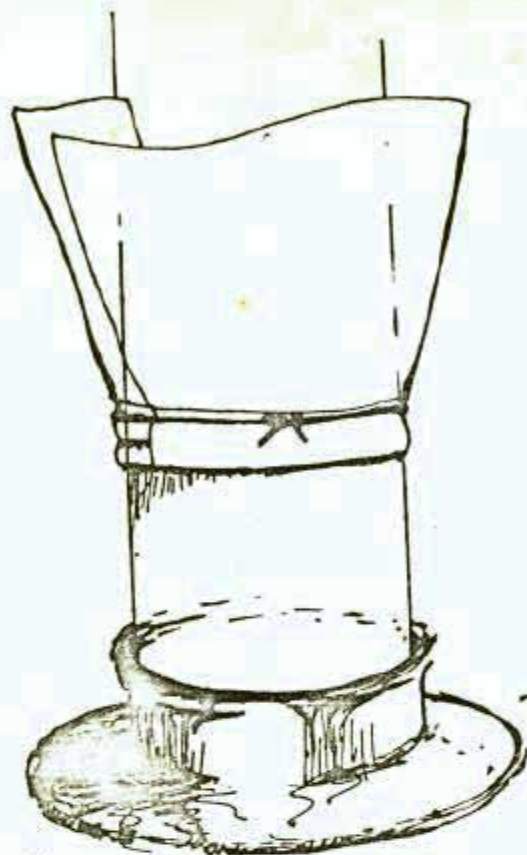


With small edge of mast boot down and grommets against mast, wrap and tie above mast collar, keeping smooth. Overlapping edge should be AFT. To get a good fit, wrap and tie the excess lanyard around again keeping to the upward edge of casing. If leaking occurs - this upper casing can be sealed to mast with duct tape.

Fold down mast boot. Wrap smoothly and tie over mast collar. A silicone bead can be placed between mast and boot. For added water tightness this canvas can be sealed with a canvas sealer or paint. Seam can be sewn.

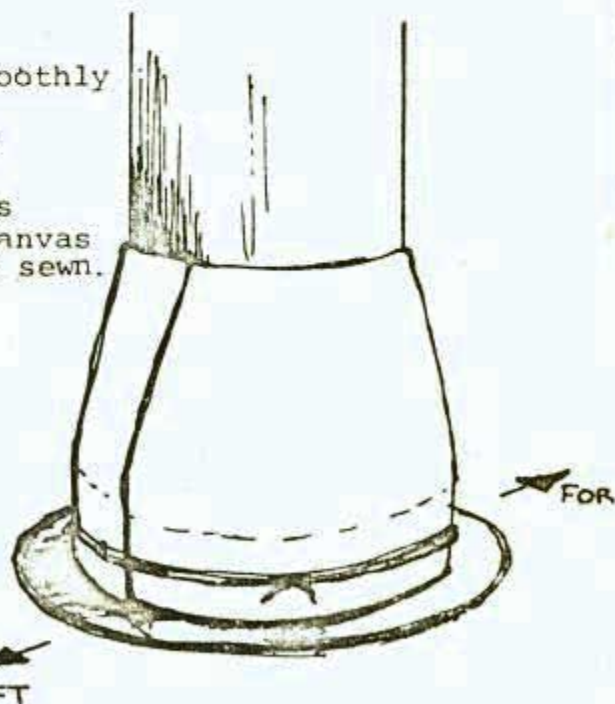


PEARSON YACHTS-ALL BOATS  
MAST WEDGE INSTALLATION

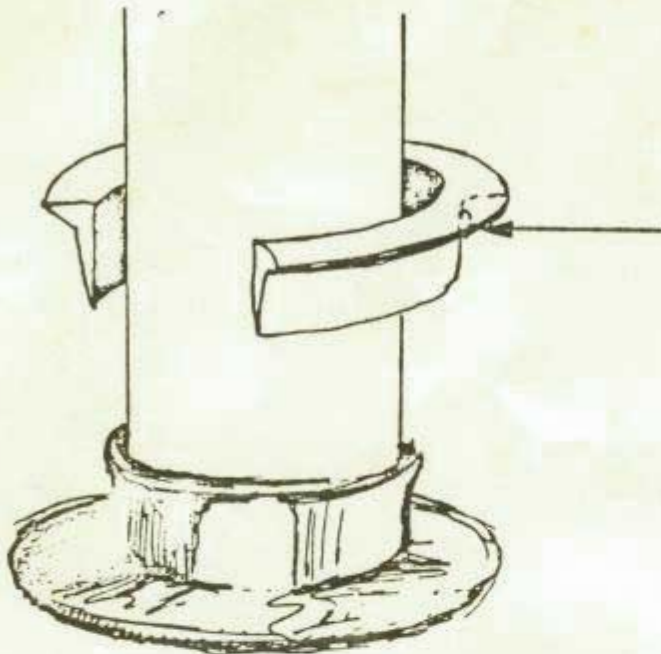

Fit mast wedge snugly around base of mast and test fit into mastcollar. If it fits, trim ends so they butt. If its to tight, may need to cut into wedged pieces. If loose, place a wide thick bead of silicone on outer face of wedge, allow to dry, retest fit. If still loose double up wedge.


Keeping joint AFT, push down mast wedge between mast and mast collar until top flange hits mast collar. Mallet maybe needed. This wedge system should fit very tightly to minimize mast movement and prevent leaks. If leaks still occur try covering joint with intertube and tape to mast and collar using Duct tape.

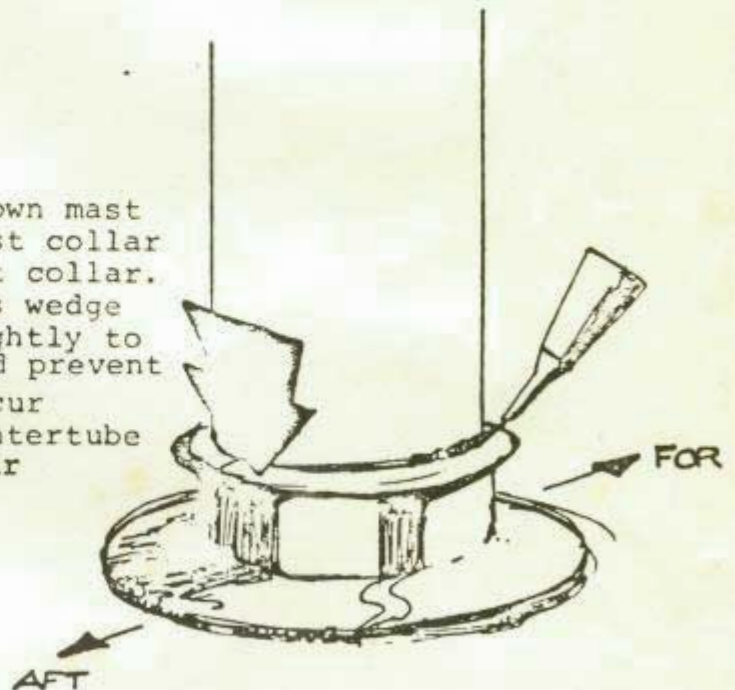

# MA:TEC INSTALLATION OF MARTEC VENTS

ENGINEERING CORPORATION  
2257 GAYLORD STREET  
LONG BEACH, CALIF. 90813  
PHONE • 213 • 435-7510

1. GRASP THE VENT FIRMLY AS SHOWN, PLACING THE HEEL AND PALM OF YOUR LEFT HAND ON THE UPPER AFT CORNER OF THE VENT WHILE HOODING YOUR RIGHT THUMB AND PALM INTO THE FRONT LOWER LIP OF THE VENT.

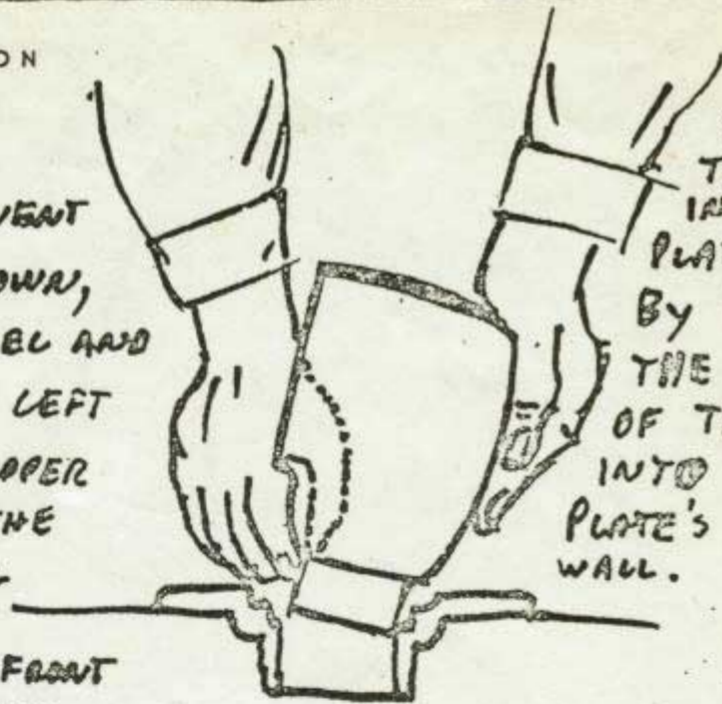

2. START THE VENT INTO DECK PLATE AS SHOWN BY TILTING THE AFT EDGE OF THE COLLAR INTO THE DECK PLATE'S INNER WALL.

3. TO COMPLETE THE PROCESS, LEAN STRAIGHT DOWN USING YOUR BODY WEIGHT WITH LOCKED ELBOWS (LEAN A BIT HARDER ON YOUR RIGHT HAND). THIS SHOULD POP THE VENT IN ALL THE WAY OR CLOSE ENOUGH THAT IT CAN EASILY BE WORKED WITH A COUPLE PUSH-TWISTS, BE SURE THE VENT IS ALL THE WAY IN WITH THE HARD PLASTIC LIP OF THE COLLAR SEATED INTO THE RECESS IN THE DECK PLATE.

